




Soletto

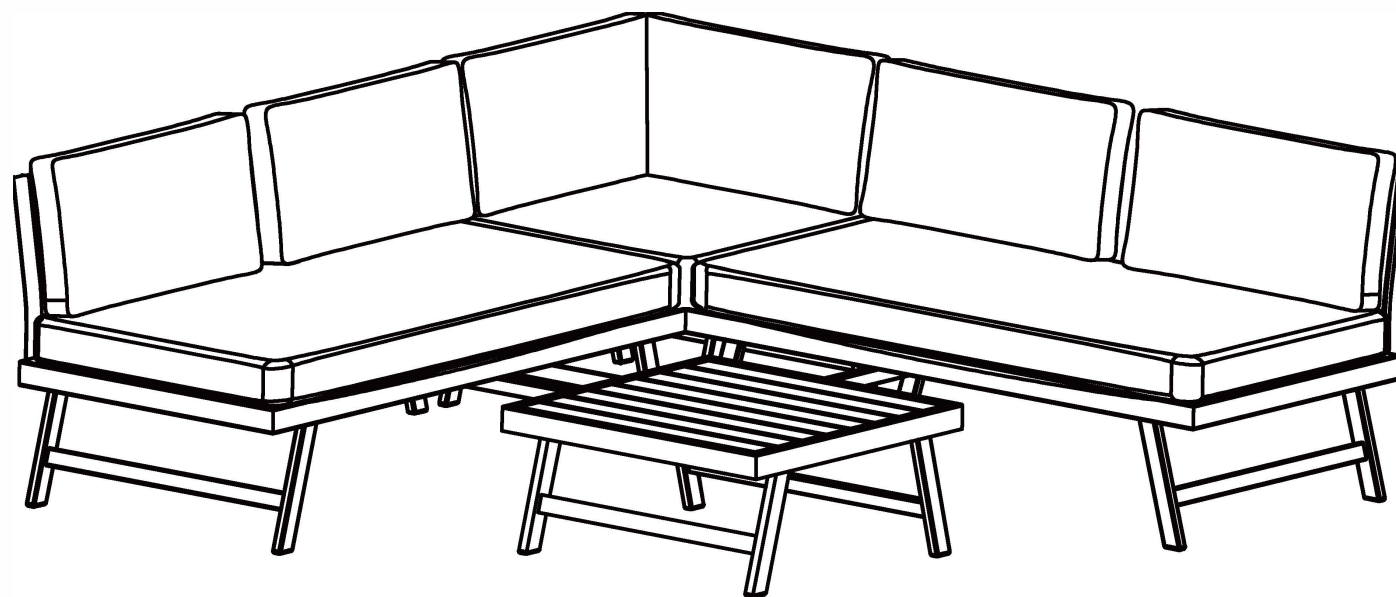


karton 1/2

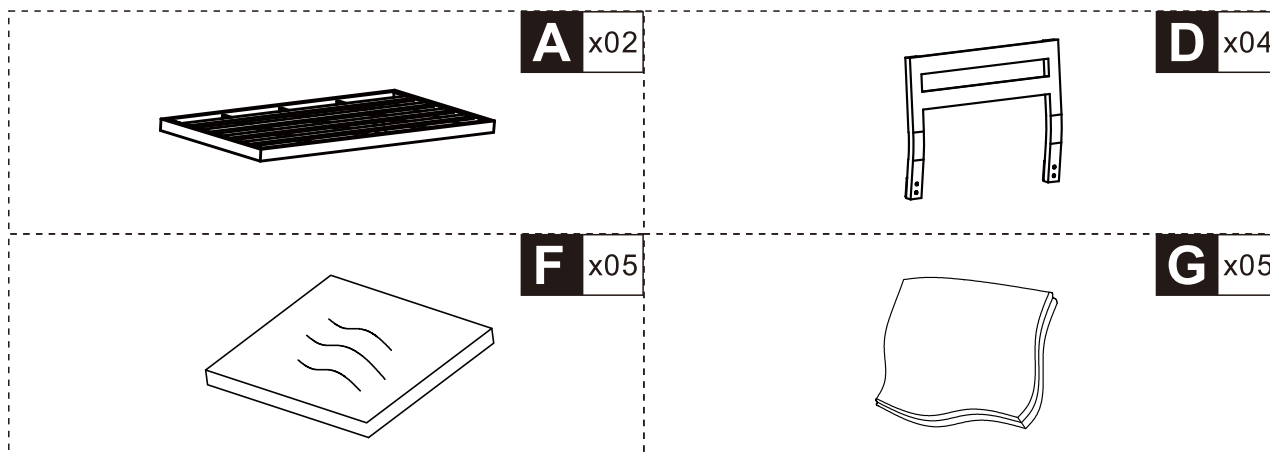


karton 2/2

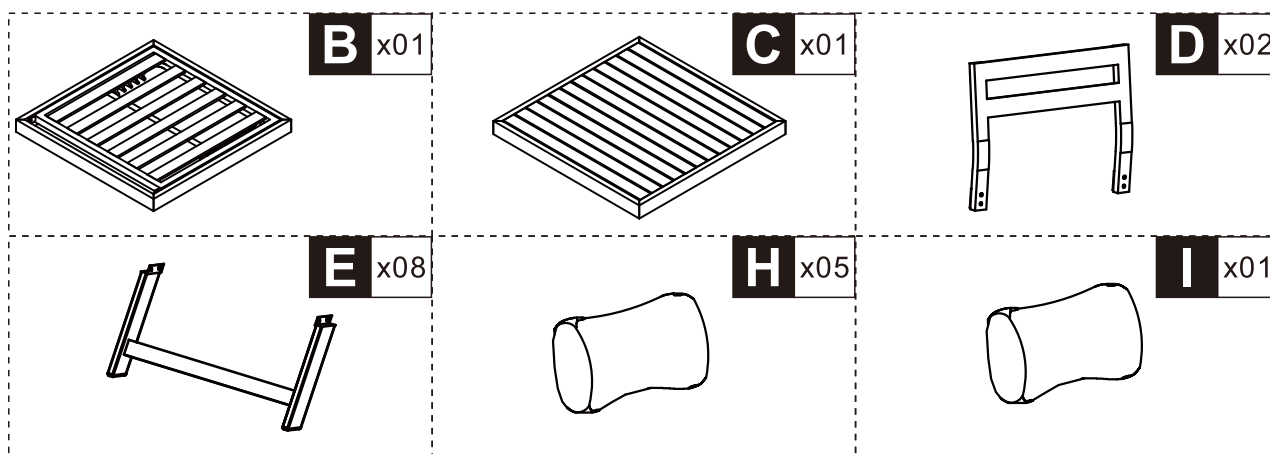

ELEMENTY

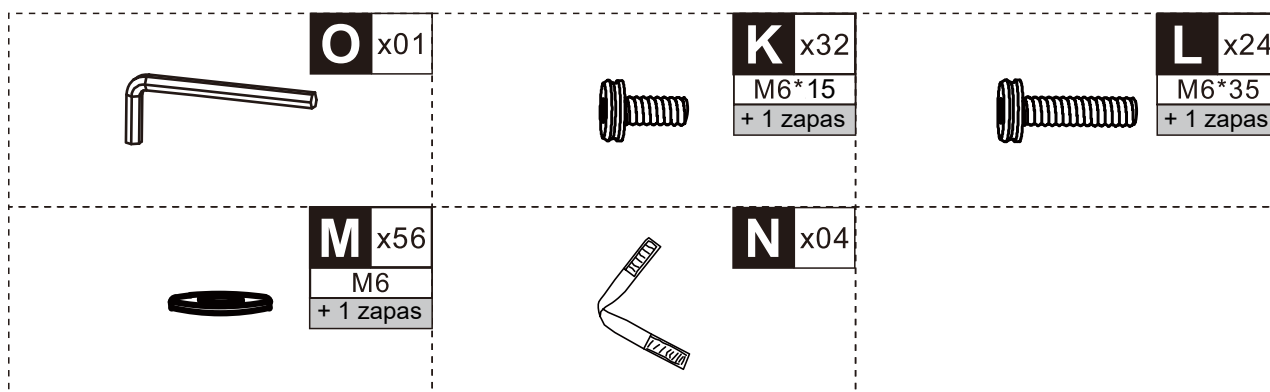


01

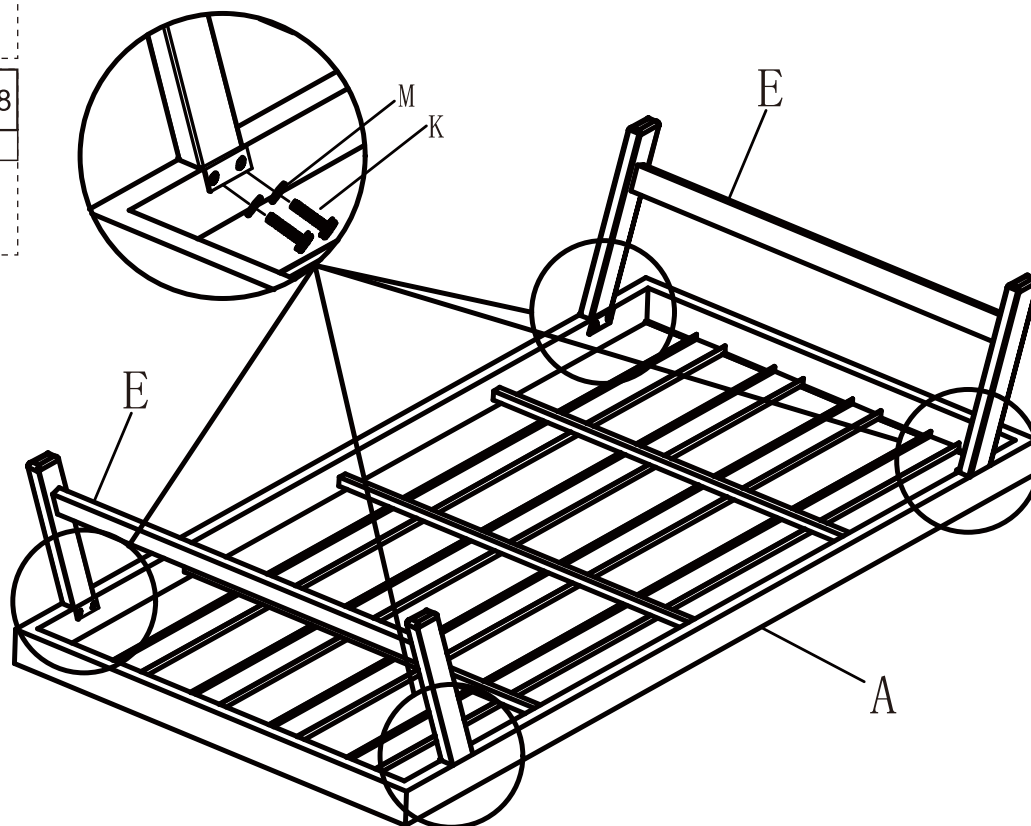K x08
M6*15**M** x08
M6


x2

02

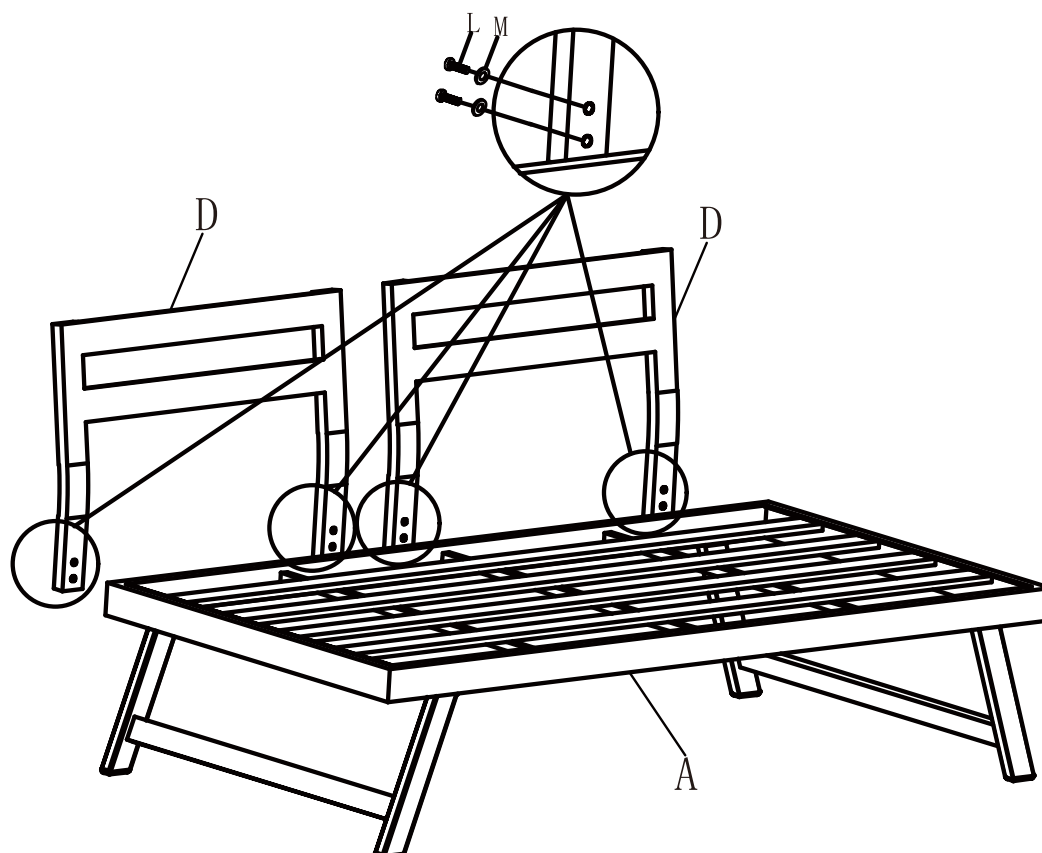L x08
M6*35**M** x08
M6

x2


03

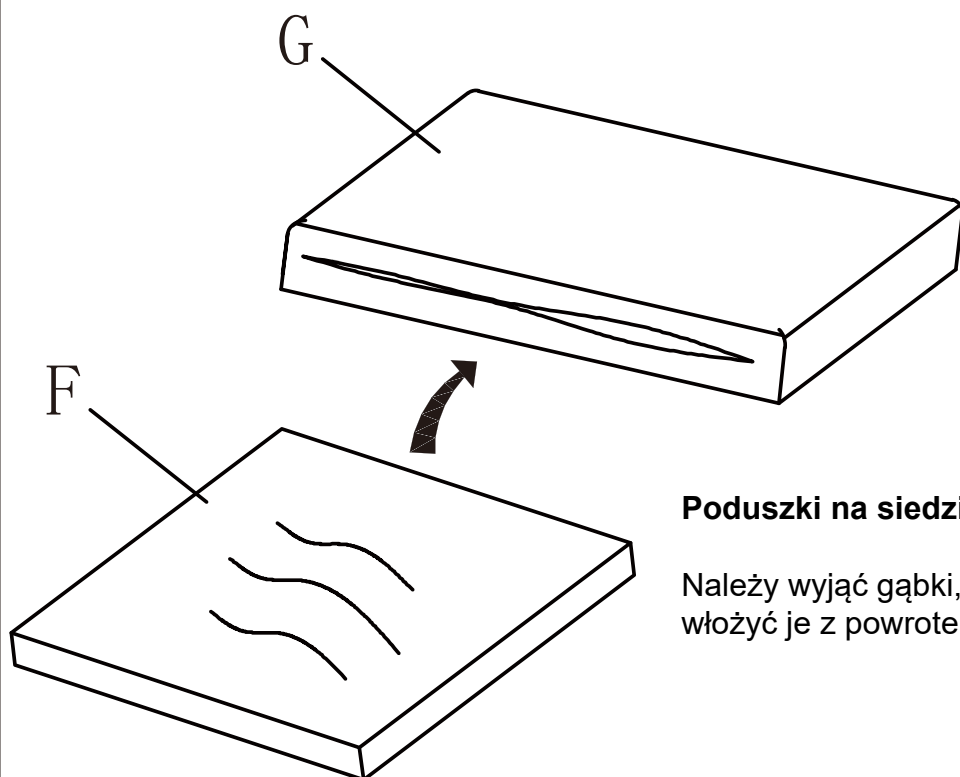**Poduszki na siedziska**


Należy wyjąć gąbki, a następnie po 3-4 godzinach włożyć je z powrotem do poszewek.

x2


04

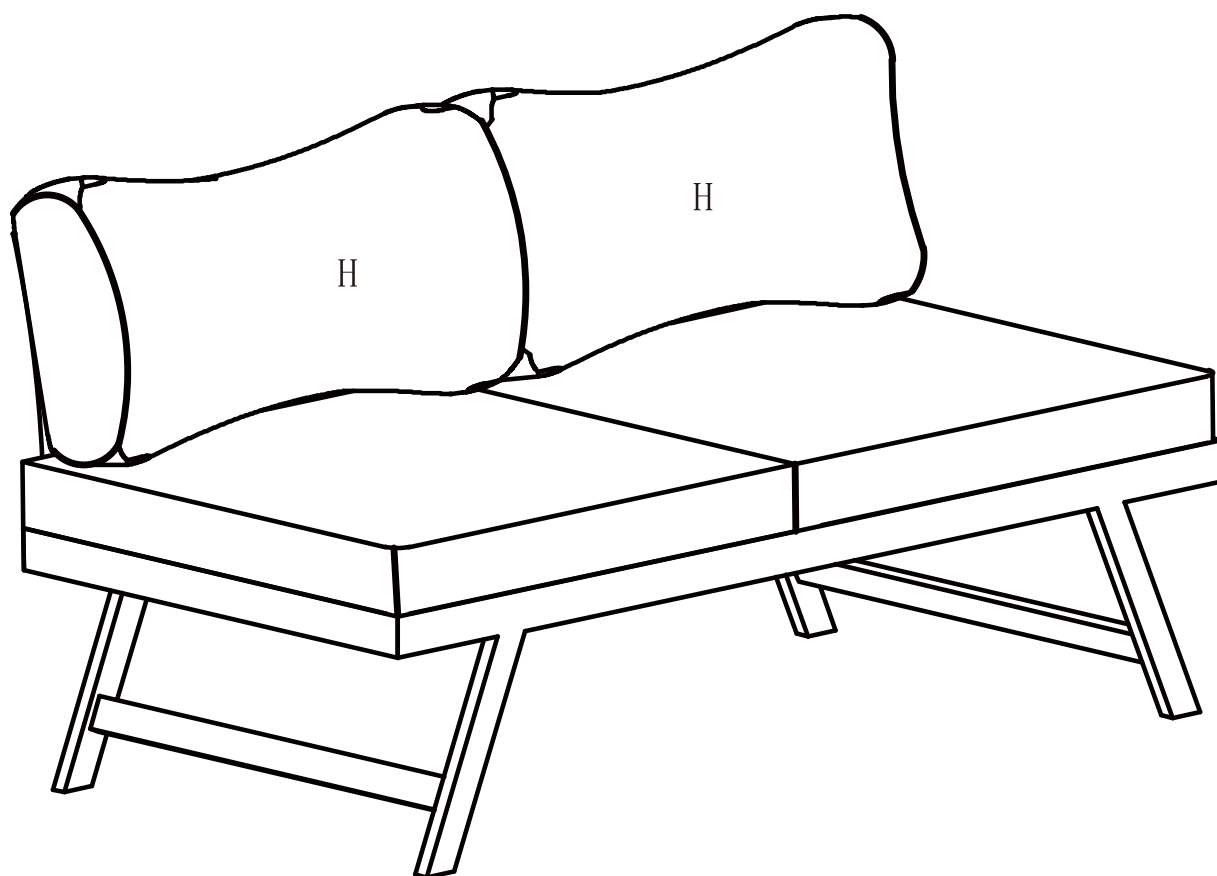**x2**


05

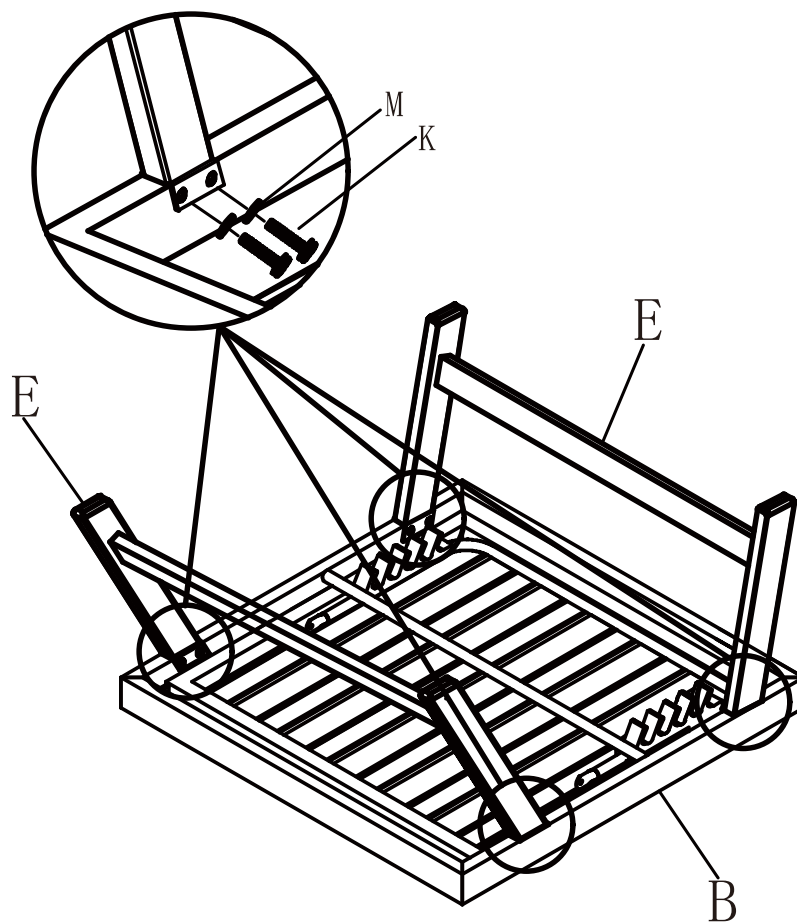K x08
M6*15**M** x08
M6

06

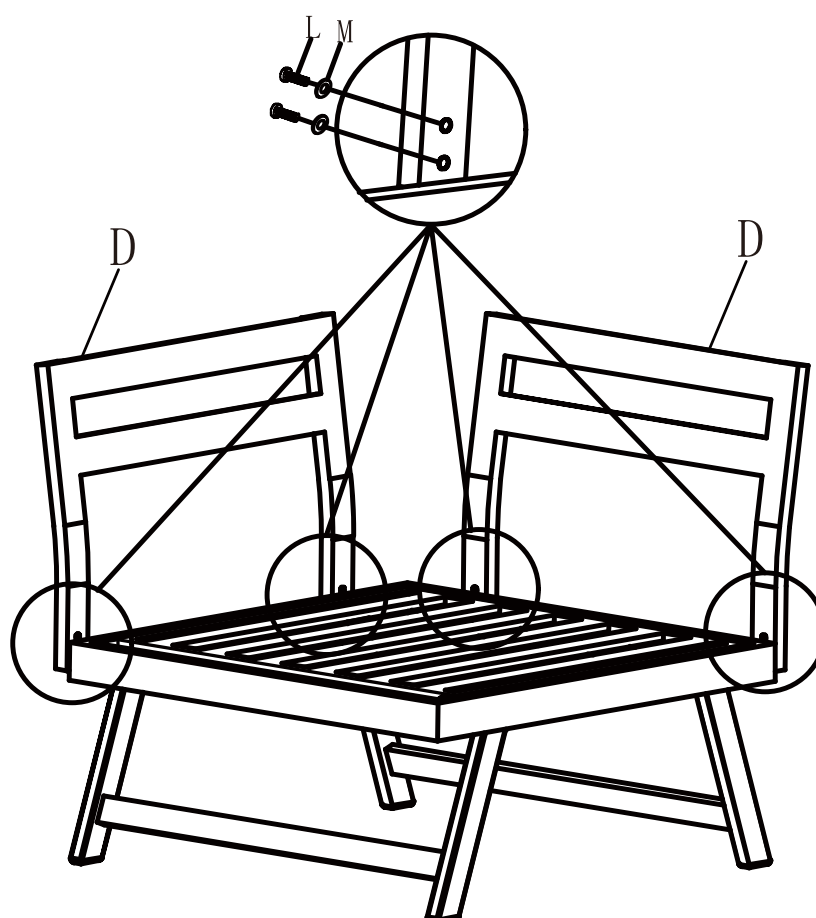L x08
M6*35**M** x08
M6

07

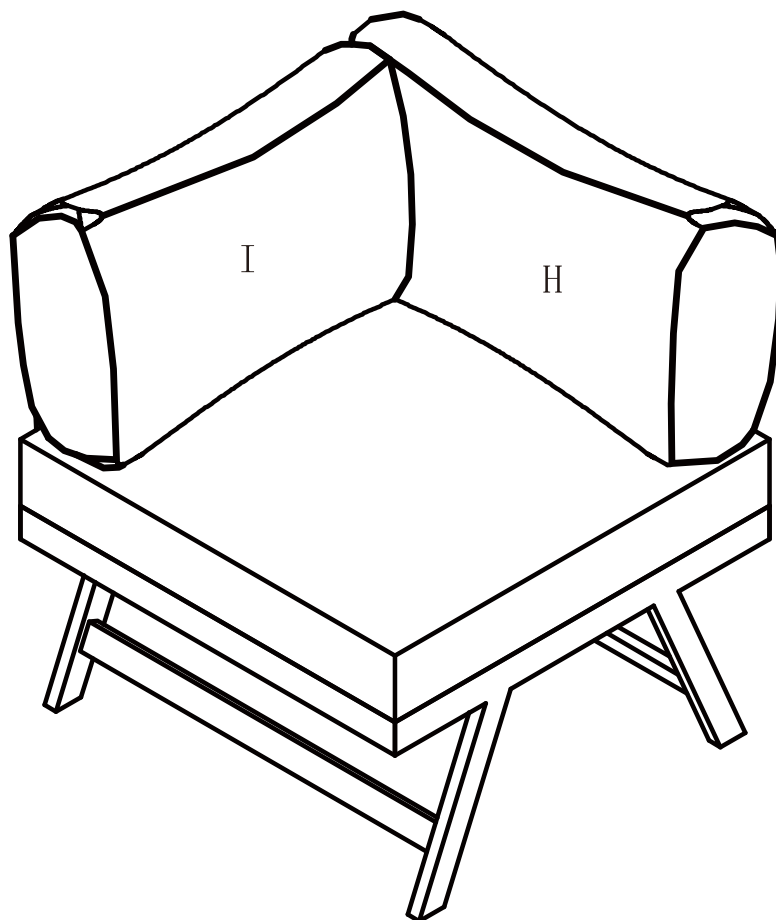


08


K x08
M6*15



M x08
M6

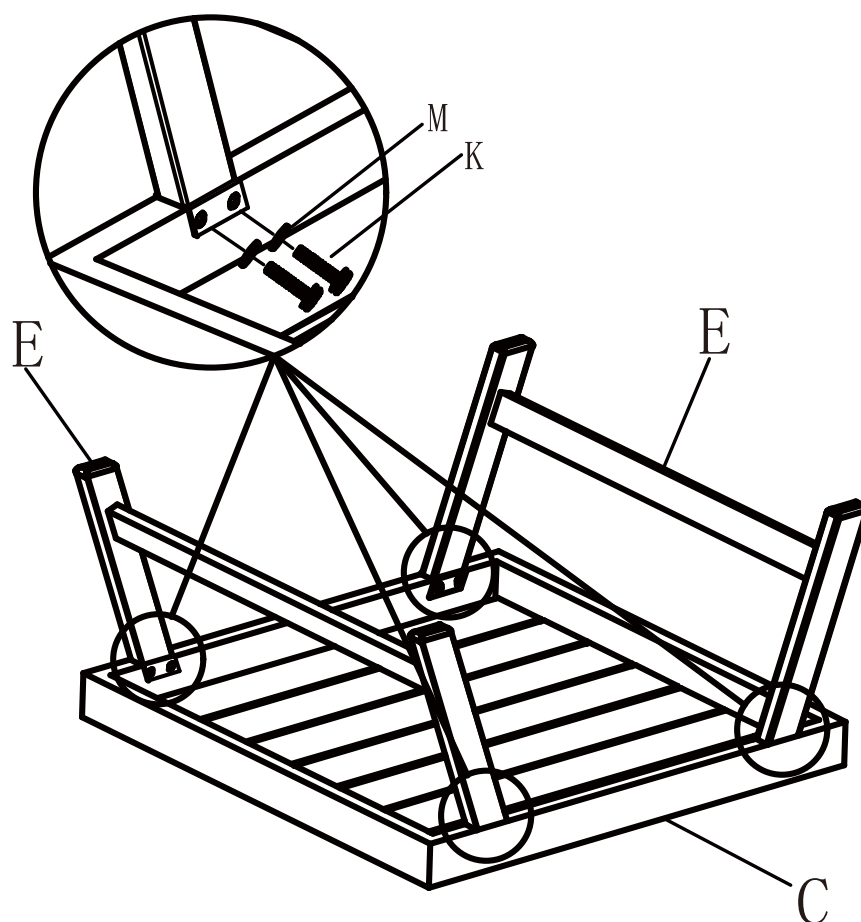

09

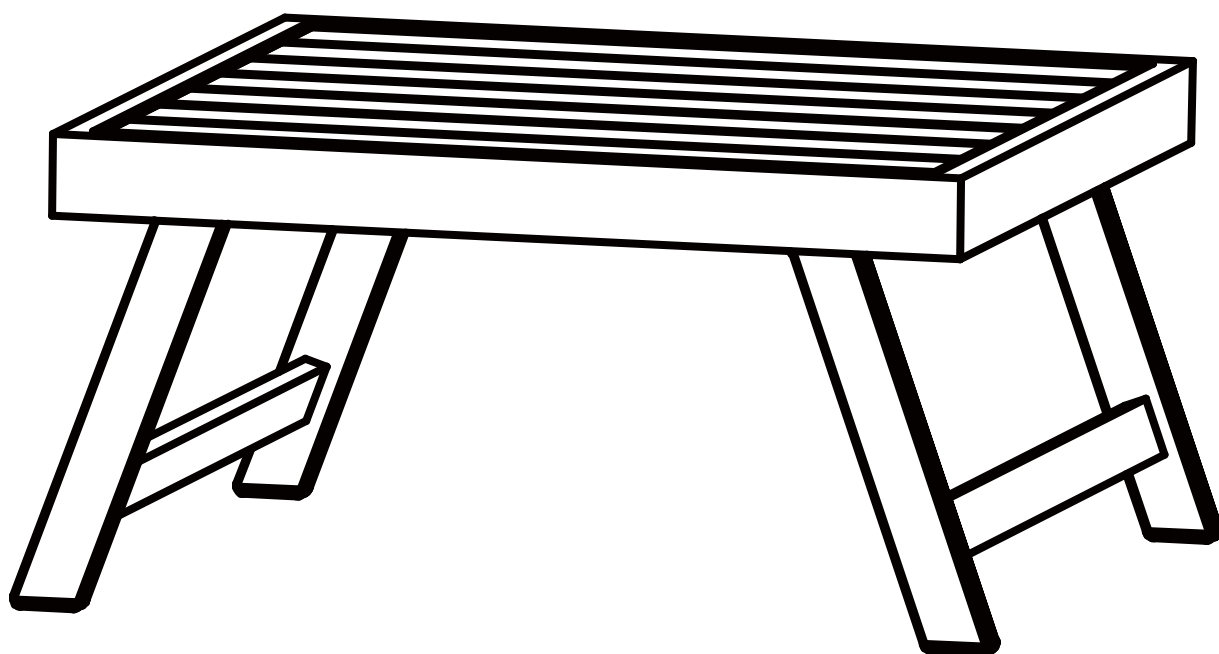

10

