

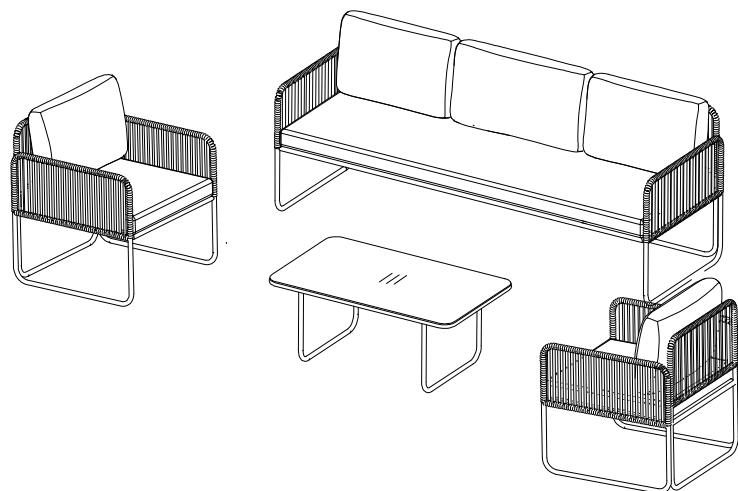


KIBI




Uwaga: Najpierw wkręć śruby do połowy.

A 1pc		aa 8pcs	 M6*15
B 2pcs		cc 1pc	
C 1pc			

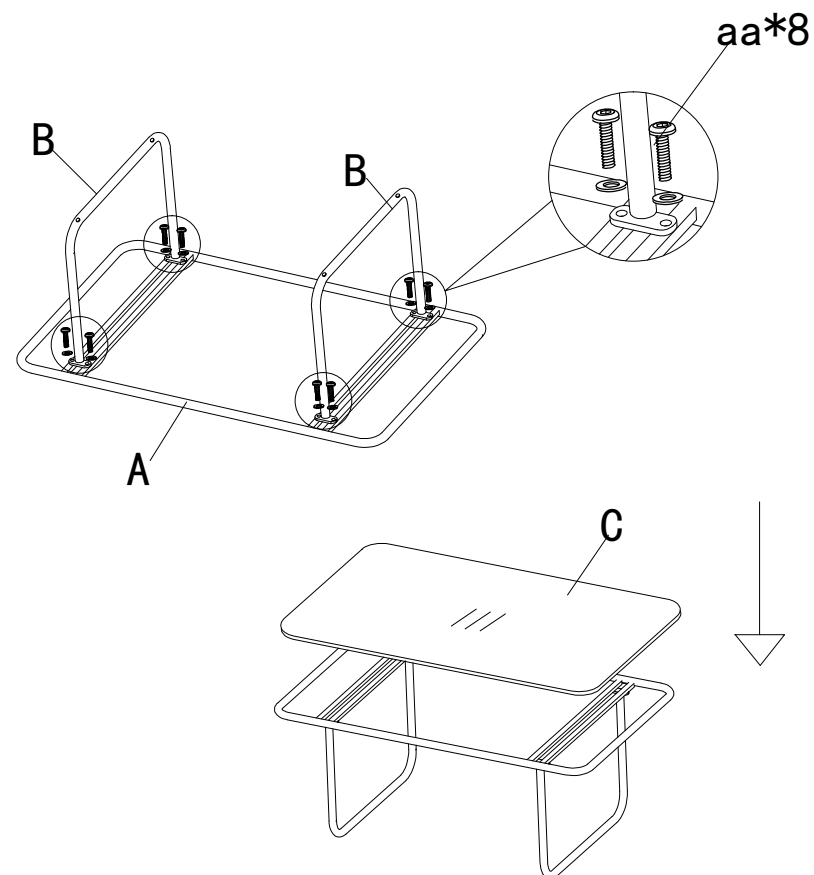

D 2pcs		G 2pcs	
E 2pcs		H 2pcs	
F 2pcs		I 2pcs	
		bb 18pcs	

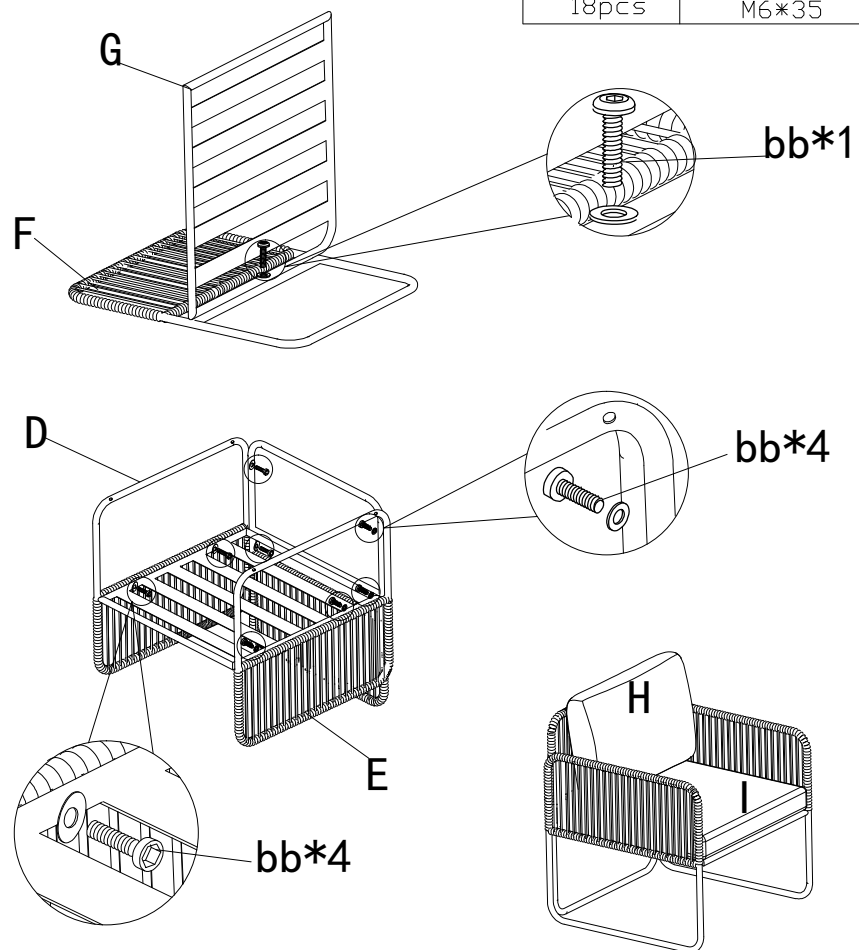

D 1pc		L 1pc	
E 1pc		M 1pc	
J 1pc		H 3pcs	
J1 1pc		N 1pc	
K 1pc		aa 6pcs	
		bb 20pcs	

