



# KIBI CORNER

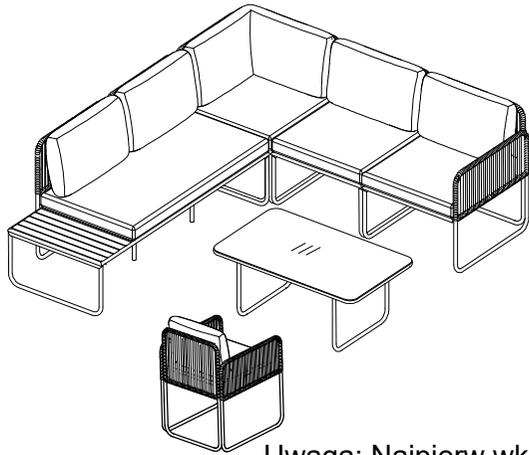


Uwaga: Najpierw wkręć śruby do połowy.

<b>A</b> 1pc		<b>C</b> 1pc	
<b>B</b> 2pcs		<b>aa</b> 8pcs	
		<b>cc</b> 1pc	


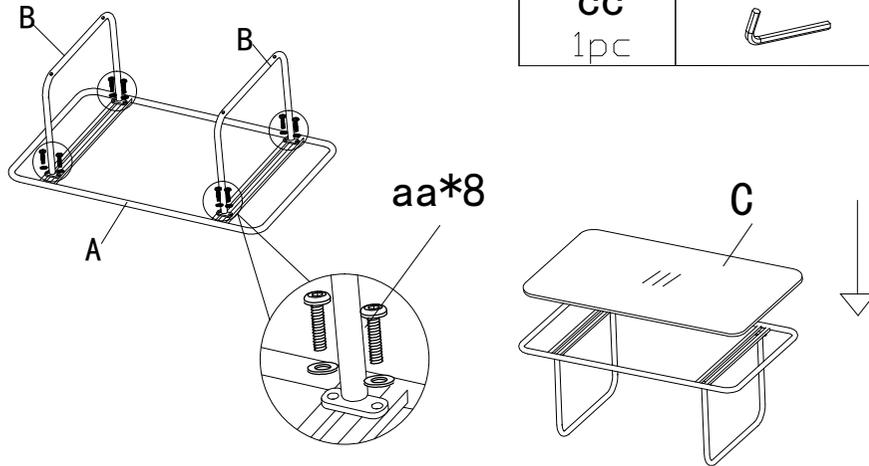


<b>D</b> 1pc		<b>H</b> 1pc	
<b>E</b> 1pc		<b>I</b> 2pcs	
<b>F</b> 1pc		<b>J</b> 1pc	
<b>G</b> 1pc		<b>aa</b> 8pcs	
<b>G1</b> 1pc		<b>bb</b> 13pcs	

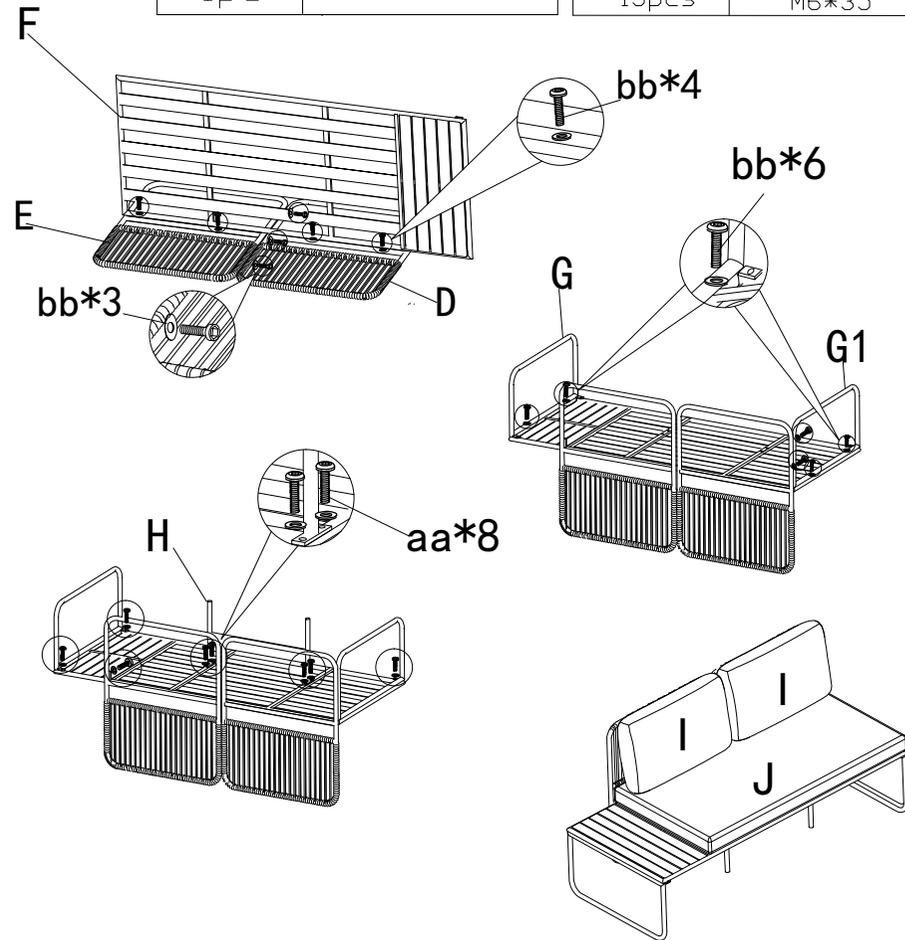

<b>K</b> 1pc		<b>M1</b> 1pc	
<b>K1</b> 1pc		<b>O</b> 1pc	
<b>L</b> 1pc		<b>I</b> 1pc	
<b>M</b> 1pc		<b>P</b> 1pc	
		<b>bb</b> 12pcs	

<b>Q</b> 1pc		<b>I</b> 1pc	
<b>R</b> 2pcs		<b>T</b> 1pc	
<b>S</b> 1pc		<b>bb</b> 10pcs	

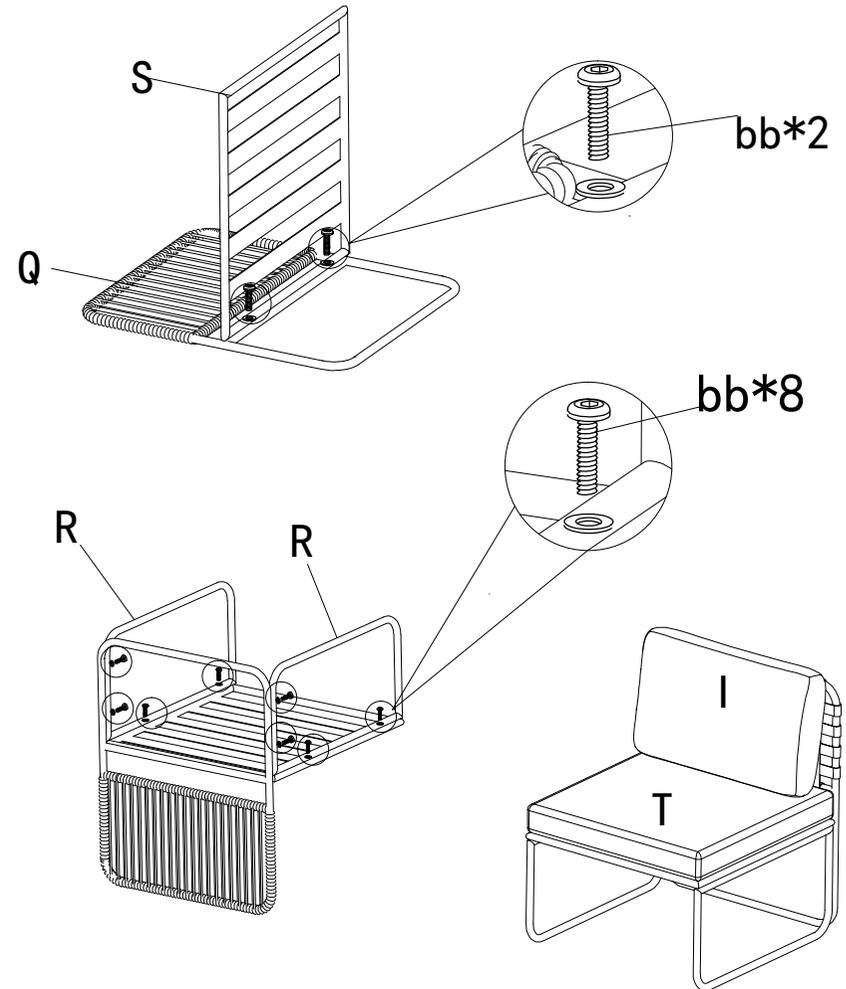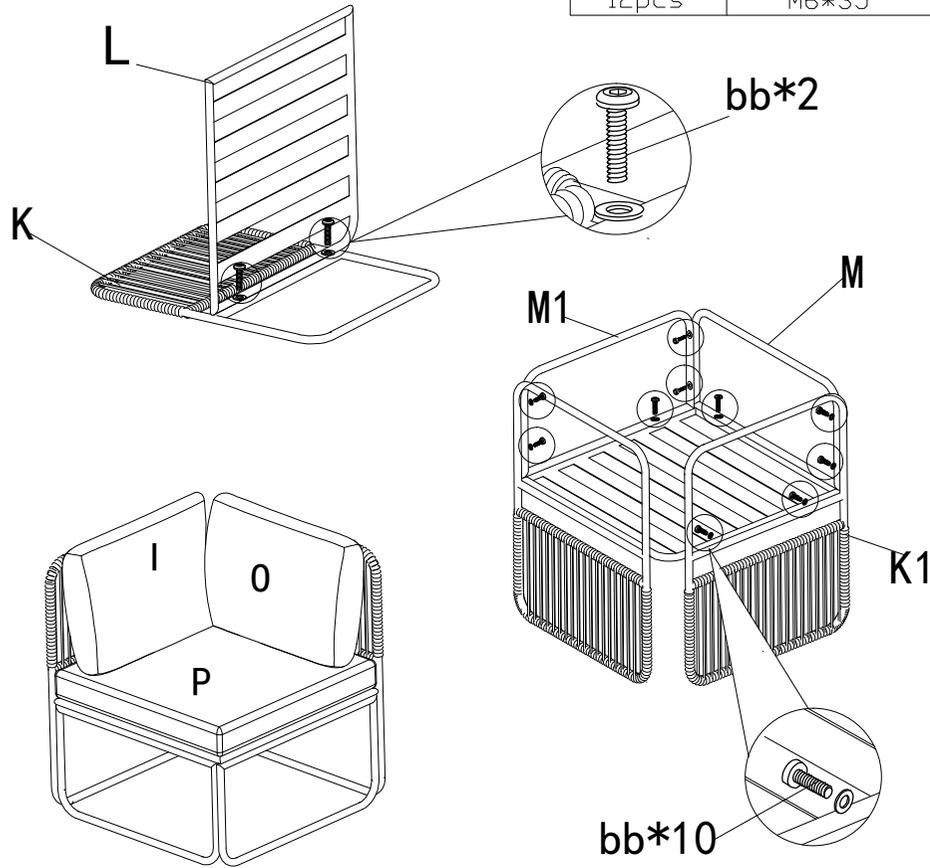

<b>U</b> 1pc		<b>R</b> 1pc	
<b>V</b> 1pc		<b>I</b> 1pc	
<b>Y</b> 1pc		<b>T</b> 1pc	
		<b>bb</b> 10pcs	

<b>D</b> 1pc		<b>G</b> 1pc	
<b>E</b> 1pc		<b>H</b> 1pc	
<b>F</b> 1pc		<b>I</b> 1pc	
		<b>bb</b> 9pcs	

